

# EDAM-8531

## Isolated USB to RS-485 & RS-422(TX,RX,RTS,CTS) Converter

### Introduction

The EDAM-8531 is a stackable USB to RS-422/RS-485 converter that provides an easy way to connect serial devices to personal computer via USB port. The RS-422 interface supports full-duplex communication and provides CTS and RTS for hardware handshaking. The RS-485 is transparent to application softwares written for half-duplex COM port communications. The EDAM-8531's Opto-isolators provide 3000 Vdc of isolation to protect the host computer from ground loops and destructive voltage spikes on the RS-422/485 data lines. The EDAM-8531 also has built in surge-protection on each data line that protect the module from high voltage spikes. The EDAM-8531 module is USB bus powered and no external power is needed.


### Features

- USB 1.1 Compliant
- Auto data flow direction detection on RS-485
- Full-Duplex RS-422 support
- RTS & CTS handshake signals support for RS-422
- Minimum 3000 VDC isolation protection
- Transient suppression on RS-485 data lines
- Automatically switch USB signal to to RS-422 or RS-485(jumperless)
- Auto baud rate detection up to 115.2 Kbps
- Reserved space for termination resistors R1(TX/DATA), R2(RX),R3(CTS),R4(RTS)
- Power and activity indicator for troubleshooting
- Driver support for Windows 95/98/ME/2000/XP, Linux
- Power requirement: USB bus power
- Mounts easily on DIN-rail or panel

### Specifications:

- USB Controller: USB 1.1 compliant
- USB interface connector: USB type B
- Isolation Side: RS-422/485
- Converted signals: RS-422 or RS485 Auto switching(jumperless)
- Handshake: RS-422 RTS & CTS
- Auto Baud rate (bps):300 ~115.2 K BPS
- Data activity LED indicator
- Isolation voltage: 3000 V DC
- RS-422/RS-485 connector: plug-in screw terminal
- Accessories (Supplied):NYLON DIN-rail Mounting Adapter SECC Panel Mounting Bracket
- Plug-in screw terminal wiring: Accepts AWG 1-#12 to #22 (0.5 to 2.5 mm) wires
- Power requirement: USB bus power
- Case: ABS with captive mounting hardware
- Power consumption: 0.5 W
- Operating temperature:0 ~ 70 °C (32 ~ 158 °F)
- Storage temperature:-25 ~ 85 °C (13 ~ 185 °F)
- Humidity: 5 ~ 95%, non-condensing

### Block diagram

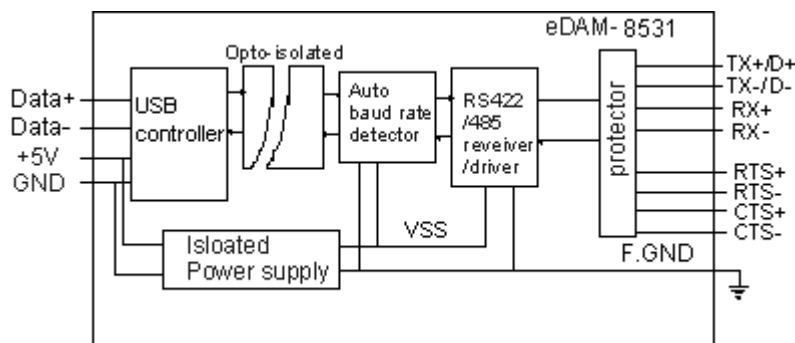


# EDAM-8531

## Isolated USB to RS-422(TX,RX,RTS,CTS) / 485 Converter

### RS-422 / 485 Termination Resistor

Provide on-board termination resistor(120 ohm) or by user (R1) for D+/Tx+ & D-/Tx-

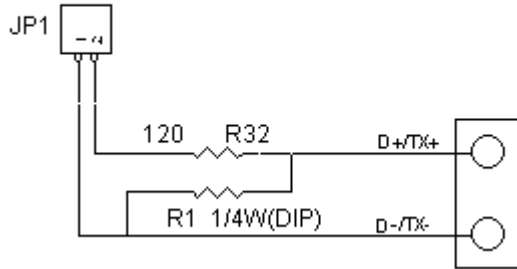


### Termination Resistor

- \* Termination resistor "R1" for D+/Tx+ & D-/Tx-
- \* Termination resistor "R2" for RX+/RX-
- \* Termination resistor "R3" for CTS+/CTS-
- \* Termination resistor "R4" for RTS+/RTS-

If the length of RS-485 is about 1.2KM,try 120 ohm first  
If the length of RS-485 is about 600M,try 220 ohm first.  
If the length of RS-485 is about 300M,try 330 ohm first.

### Connection

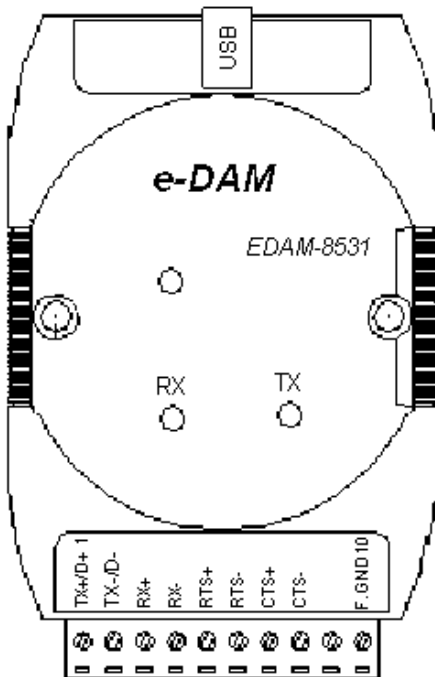

### Pin Definitions

Pin No.	Name	Description
1	TX+/D+	RS-422 or RS-485 transmission line, positive
2	TX-/D-	RS-422 or RS-485 transmission line, negative
3	RX+	RS-422 receive line, positive
4	RX-	RS-422 receive line, negative
5	RTS+	RS-422 Request to send line, positive
6	RTS-	RS-422 Request to send line, negative
7	CTS+	RS-422 Clear to send line, positive
8	CTS-	RS-422 Clear to send line, negative
9	NC.	
10	F.GND	Ground

### USB Type B connector

1	+5V	USB +5VDC bus power
2	Data-	USB Data line, Negative
3	Data+	USB Data line, Positive
4	GND	USB bus power ground

### Windows 98 USB Driver Installation

- Plug the EDAM-8531 into the computer USB port or a USB Hub
- Open Control Panel.
- Select Add New Hardware Wizard icon.
  - . The 'Add New Hardware Wizard' appears, Press 'Next' button.
  - . In the dialog box that comes up, leave the default choice, (Search for the best drivers for your device), Press 'Next' button.
  - . In the dialog box that comes up, leave the default choice, (Floppy disk drivers), Press 'Next' button.
  - . In the dialog box that comes up, leave the default choice, (The update driver), Press 'Next' button.
  - . In the dialog box that comes up, Press 'Next' button. (Window driver file search for the device)
  - . Dialog box appears to tell you that the installation has finished, Press 'Finish' button.
- Now you have installed EDAM-8531 on your system, you can see a new USB serial device in 'Control->Device Manager'. The EDAM-8531 acts as a standard COM port and is transparent to any UART application softwares.

### Dimensions

